

# 0. Introduction

## Guide Objectives:

- Export the configuration of a PSD drive
- Restore the configuration using an SD card

Using an SD card allows users to restore or clone the configuration of a PSD drive without the need for a PC (e.g. in cases where machines are produced in series).

## Prerequisites:

- PSD ServoManager software version 1.6.2 or later ([available here](#))
- Firmware version 1.6.2 or later (installed)
- SD Memory Card Formatter software ([available here](#))
- SD card (32GB maximum capacity)

⚠ The target PSD and the source PSD must have the same order code ⚠

---

Revision #2

Created 2024-12-09 13:50:07 UTC by Davide Molino

Updated 2024-12-09 14:19:58 UTC by Davide Molino